

**CARTRIDGE CHANGE REMINDER:**

Replace cartridge 18-24 months  
from your purchase date.

Purchase Date:

\_\_\_/\_\_\_/\_\_\_

REPLACEMENT CARTRIDGE  
CQE-RC-04052



WHITE  
CQE-RC-00809



CHROME  
CQE-RC-00808



**ONE-YEAR LIMITED WARRANTY**

CRYSTAL QUEST® warrants your CRYSTAL QUEST® Bath Ball Water Filter for one year from the date of purchase against all defects in materials and workmanship when used in compliance with the manual. CRYSTAL QUEST® disclaims all implied warranties including, without limitation, warranties of merchantability and fitness for a particular purpose. If for any reason the product proves to be defective within one year from the date of purchase, please call for assistance. This warranty gives you specific legal rights and you may have other legal rights which vary from state to state. CRYSTAL QUEST® assumes no responsibility for incidental or consequential damages, for damages arising out of misuse of the product, or the use of any unauthorized attachment. Some states do not allow the exclusion or limitation of implied warranties or incidental or consequential damages; therefore, the above limitations or exclusions may not apply to you. Should service be required during or after the warranty period or should you have any questions regarding how to use your CRYSTAL QUEST® Bath Ball Water Filter, contact our Technical Support department at [service@crystalquest.com](mailto:service@crystalquest.com), Monday through Friday, 9 A.M. to 5 P.M. Eastern Time.

KEEP THIS MANUAL FOR FUTURE REFERENCE AND UNIT MAINTENANCE

Online warranty information  
<http://crystalquest.com/warranty.htm>

Product design is subject to change without notice.


For further assistance, contact your Crystal Quest dealer  
or visit us at [www.crystalquest.com](http://www.crystalquest.com)

To view the latest edition of the Bath Ball Filter, visit [CrystalQuest.com](http://CrystalQuest.com)

*Please note all drawings, pictures, colors and sizes are approximate for illustrative purposes only and may not exactly resemble the end product.*



**Crystal Quest® Bath Ball Water Filter  
INSTALLATION AND OPERATION GUIDE**

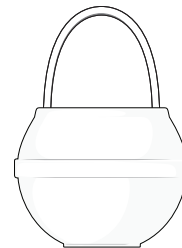


Copyright 2017  
Crystal Quest®  
All rights reserved.  
MADE IN THE USA



## HOW TO USE

Hang the Bath Ball from its cord (a) over your bathtub faucet. As the tub is filling, water will flow through the filter and out of the bottom (b) with oxygenated, contaminant-free filtered water.

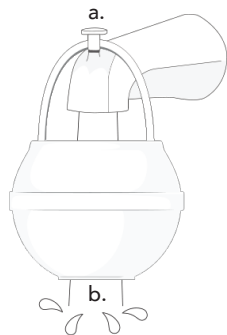

### OPERATING SPECIFICATIONS

Pressure Range:	30-60 psi (2.1-4.1 bar)
Temperature Range:	40-85°F (4.4-29.4°C)
Optimum Service Flow:	2-4 gpm

## BEFORE USING YOUR BATH BALL

1. Activate filter by running hot water through the Bath Ball cartridge for 2-3 minutes. This will flush loose media fines from bath ball cartridge. Loose media fines in a new cartridge are normal when first used. Loose media fines are not harmful.
2. Cool to the desired temperature before entering bath.

## MAINTENANCE




Caution: Protect cartridge from freezing temperatures. If freezing temperatures exist, drain unit and set wet replacement cartridge aside to dry. Protect cartridge from direct sunlight. Not intended for outdoor use.

## WHEN TO CHANGE REPLACEMENT CARTRIDGE

Easily replace the filter cartridge (c) every 12-18 months depending on consumption and water conditions. Harsher water conditions will require more frequent changing of the replacement cartridge.

## CARTRIDGE REPLACEMENT

1. Unscrew the Bath Ball filter housing (Fig 1).
2. Replace the used cartridge with the new replacement cartridge (Fig 2).
3. Screw the housing back together (Fig 3).
4. Run hot water for 2-3 minutes to flush media fines from Bath Ball cartridge. Loose media fines in a new replacement disk are normal and will be flushed out when in use.

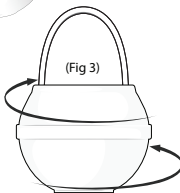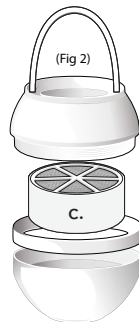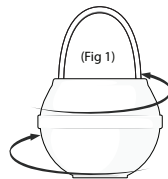

## BACK FLUSHING

Back flushing extends the life of your cartridge. Running water the opposite way through the cartridge will restore optimum service flow and ensure premium contact time with the media.

1. Unscrew the filter housing.
2. The replacement cartridge can be used inversely. Simply remove the replacement cartridge and reverse it by turning it around.
3. Reassemble the housing as per the instructions.
4. Use as normal.